



# Folding bench Berlin - frame 47cm


OP-9645-VIEN

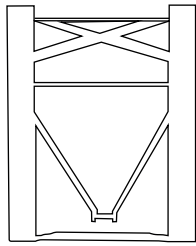

A. 2x

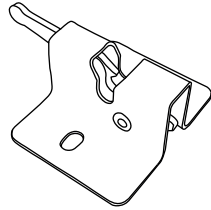

B. 2x



C. 4x



D. 1x



1. 2x  
m6 x 70



2. 15x  
m6 x 40



3. 17x




4. 17x

Tip!

When drilling holes for the bolts, make sure to place a wooden board underneath, to prevent the table top from splintering.


Be sure to carefully unpack the parts and place them on a soft surface, such as a blanket. Then check all parts for damage before you begin assembly. Assembled products cannot be returned.

1

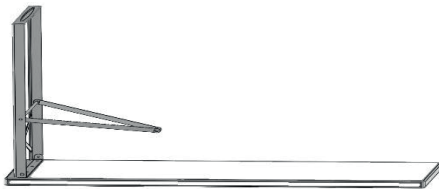

Draw 2 lines for the 2 side legs. Put the side leg with short hinge align the line and drill 5 holes. Fasten bolts with washers and nuts.


2

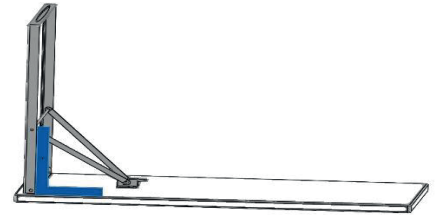

Put the side leg vertical in 90 - 91 degrees, then position the lock.


Drill holes for the lock and 2 bolts M6\*40. Fasten bolts with washers and nuts.

3

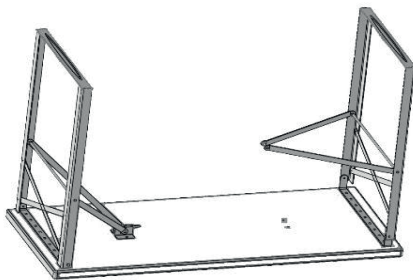

Put the side leg with high hinge align the drawing line. Drill 5 holes for the bolts, fasten bolts with washers and nuts.

4

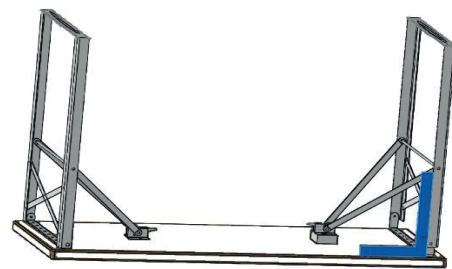

Put the side leg vertical in 90 - 91 degrees, then position the lock.

Drill holes for the lock and wood block. Use 2 bolts M6\*70. Fasten the bolts with washers and nuts. Mount 4 rubber plugs.