
Folding bench Berlin - frame 75 cm

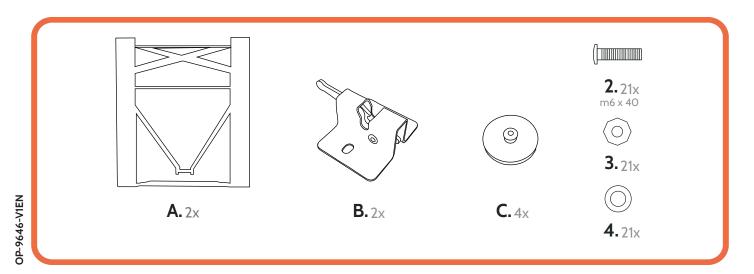




Tip!

When drilling holes for the bolts, make sure to place a wooden board underneath, to prevent the table top from splintering.

Be sure to carefully unpack the parts and place them on a soft surface, such as a blanket. Then check all parts for damage before you begin assembly. Assembled products cannot be returned.




Draw 2 lines for the 2 side legs. Place the side leg align the line, drill 8 holes. Fasten bolts with washers and nuts.

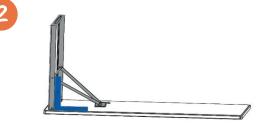

Put the side leg vertical in 90 - 91 degrees, then position the lock.

Drill holes for the lock and 2 bolts. Fasten bolts with washers and nuts.

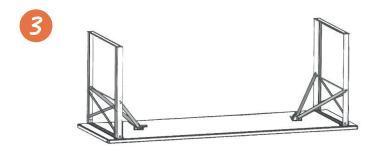

Repeat another side leg. Mount 4 rubber