



# Folding bench Berlin - frame 25cm


OP-9647-VIEN

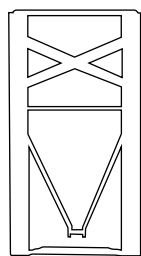

A. 2x

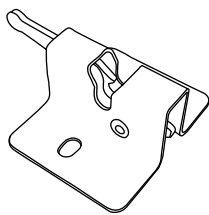

B. 2x



C. 4x



1. 11x  
m6 x 40



2. 11x



3. 11x

Tip!

When drilling holes for the bolts, make sure to place a wooden board underneath, to prevent the table top from splintering.

Be sure to carefully unpack the parts and place them on a soft surface, such as a blanket. Then check all parts for damage before you begin assembly. Assembled products cannot be returned.

1



Draw 2 lines for the 2 side legs. Put the side leg align the line and drill 3 holes. Fasten 3 bolts M6\*40 with washers and nuts.

2



Put the side leg vertical in 90 - 91 degree and then position the lock. Drill hole for the lock and 2 bolts M6\*40. Fasten the bolts with washers and nuts.

3



Repeat step 2 on the other side. Mount 4 rubber plugs.